

# SuperSwab<sup>®</sup> Assembly Instructions



- 1** Replace used swab by using a tool (e.g. flat screwdriver or key), position it between swab holder and handle, and unsnap. Remove swab from holder.




- 2** Lay new swab wire end into groove with curved tip downward in desired oval opening.



Position **A** for gallon container  
Position **B** for quart container

- 3** Align wire with tooth. Push swab holder into handle and snap into position.

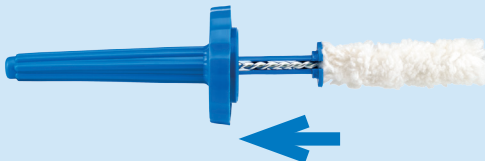

- 4** The assembled SuperSwab is now ready for use with Weld-On products.



\* The swab is disposable and replaceable. Swab holder and handle are reusable.

#14111 SuperSwab bulk pack contains swabs, swab holders and handles. #14112 Replacement swab bulk pack only contains swabs.  
Patent No. 8747004.

**WELD-ON<sup>®</sup>**